



WAGNER INSTRUMENTS

POST OFFICE BOX 1217
GREENWICH, CT 06836 - 1217 U.S.A ☎(203) 698-9681

INSTRUCTIONS / FDIX – USB CABLE DRIVER INSTALLATION

2/28/18

REQUIRED ITEMS:

- FDIX Force Gage
- USB Cable
- File CP210xVCPInstaller_x64.exe (64 bit CPU)


OR

- File CP210xVCPInstaller_x86.exe (32 bit CPU)
- PC or laptop computer with USB port, running Windows 7, Windows 8 or Windows 10.

Note: Cable driver must be installed **BEFORE** the gage and USB cable are attached to the PC.
Do not connect gage to the PC at this time.

> Execute the file CP210xVCPInstaller_x64.exe **OR**
CP210xVCPInstaller_x86.exe, and follow the installer prompts.

> The following dialog boxes will appear during the installation:

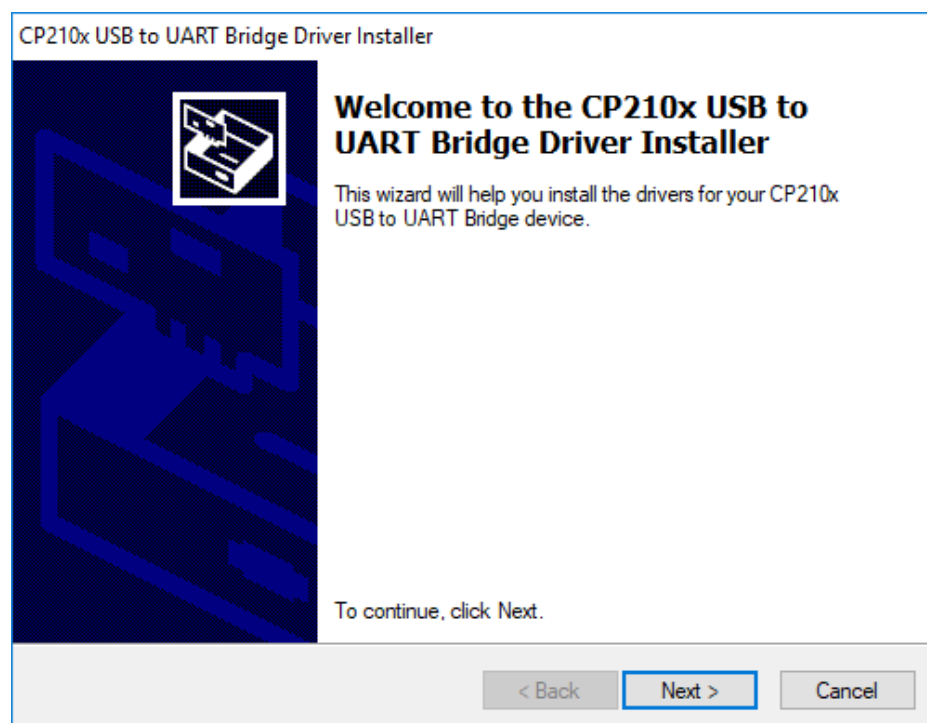


> Click **Next**.



WAGNER INSTRUMENTS

POST OFFICE BOX 1217
GREENWICH, CT 06836 - 1217 U.S.A ☎(203) 698-9681

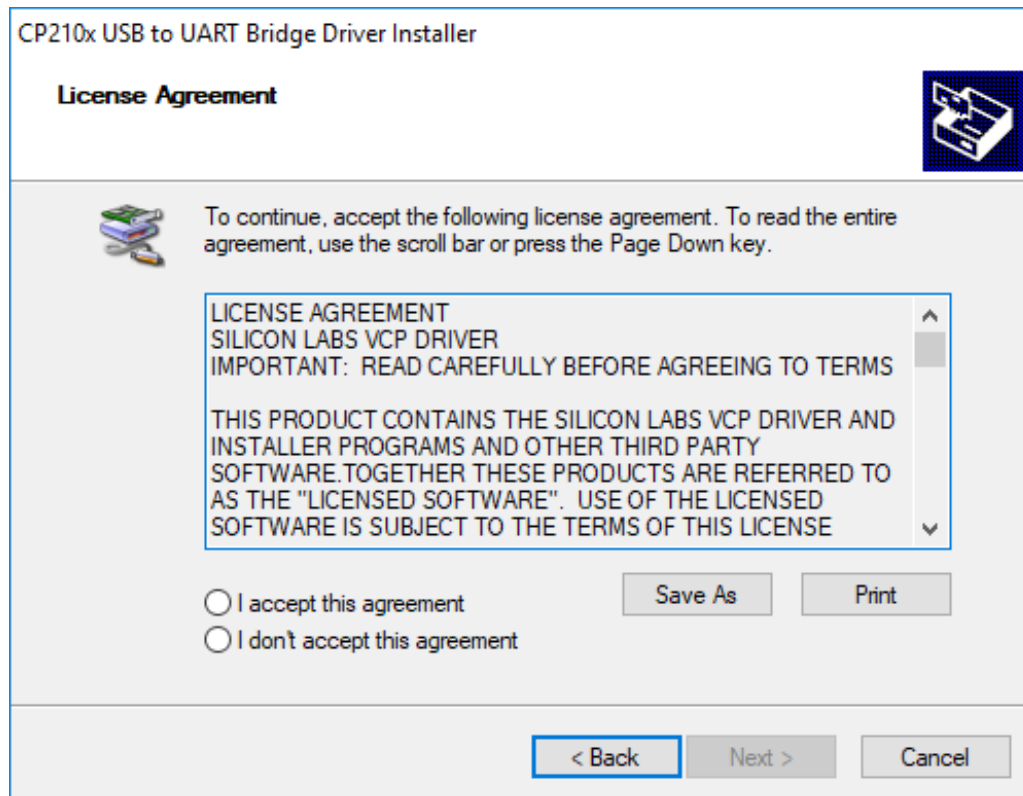


- > Select "I accept this agreement", and click next.
- > Driver will install. After installation the following dialog box appears.



WAGNER INSTRUMENTS

POST OFFICE BOX 1217
GREENWICH, CT 06836 - 1217 U.S.A ☎(203) 698-9681

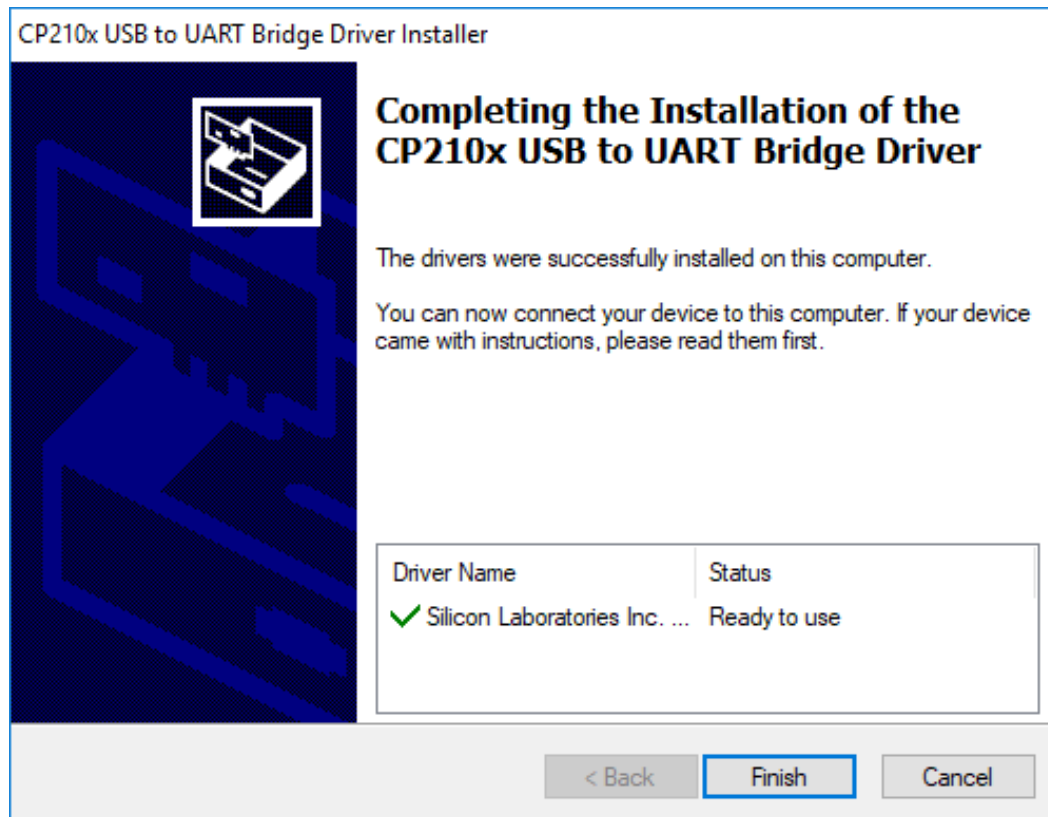

> Click **Finish**.

> After installation of the driver is complete, insert gage USB cable into the PC and power up the gage.


> To verify installation and gage COM Port number:

- Go to Start-> Control Panel-> System-> Hardware Tab-> Device Manager
OR
- For Win 10, type "Device Manager" in Win 10 search box and select "Device Manager".
- Expand Ports (COM & LPT).
- COM Port number will be displayed in the "Ports" descriptor message.



WAGNER INSTRUMENTS

POST OFFICE BOX 1217
GREENWICH, CT 06836 - 1217 U.S.A ☎(203) 698-9681

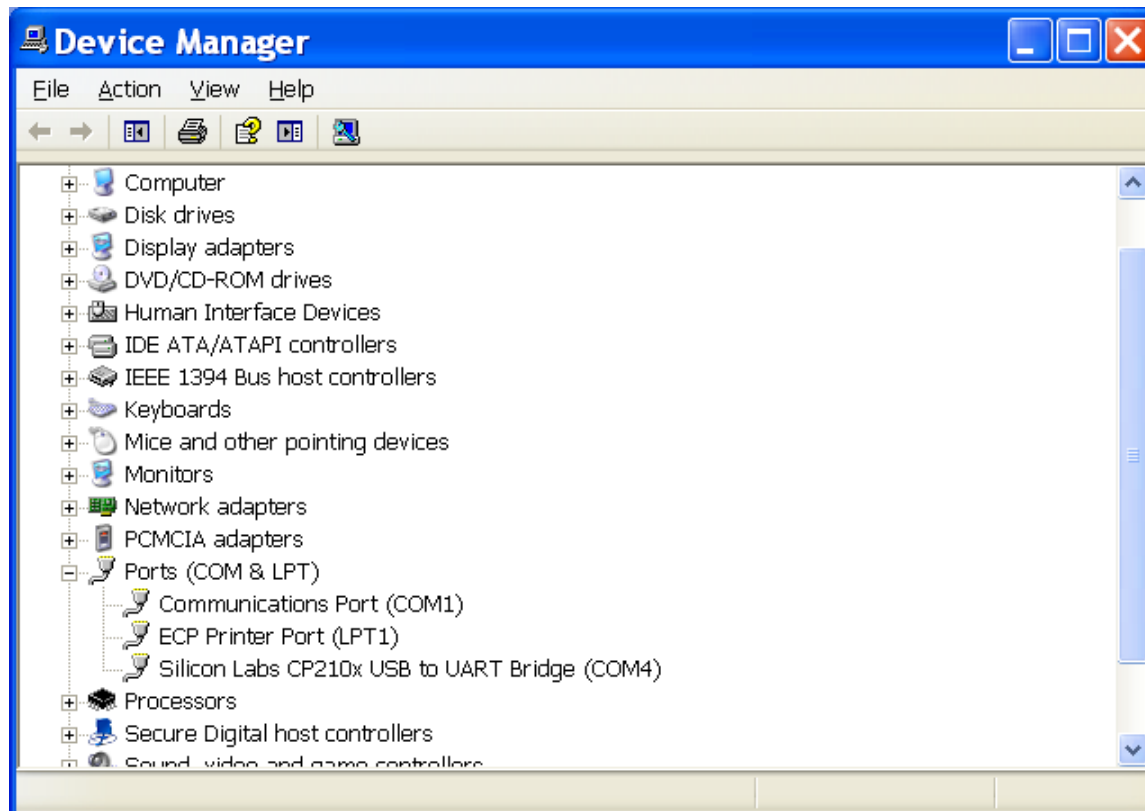

- In this case, the gage COM Port is COM4.

File name: FDIX_Instructions_USB Cable Driver_180228